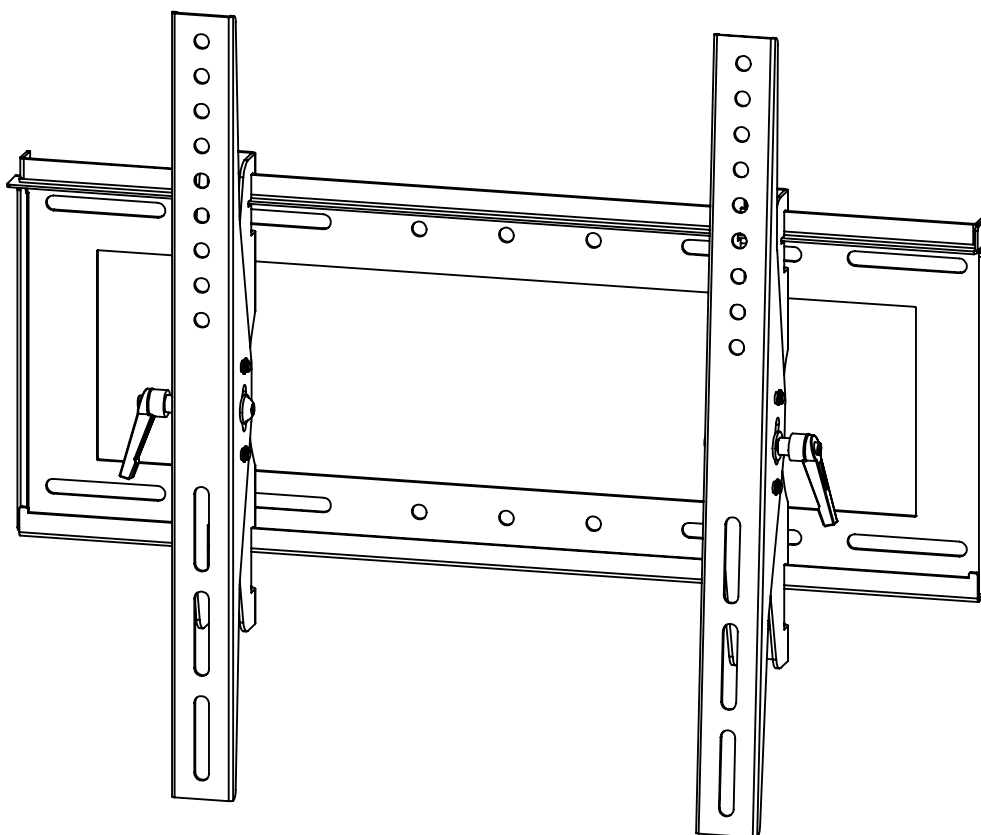# blake uk

INSTALLATION GUIDE

Flat Panel Mount

BTTL1/52

Support 32" to 52" Screens

Max Load Capacity: 125 lbs (57 kg)

VESA   100x100 / 100x200 / 200x200 / 400x500 compatible
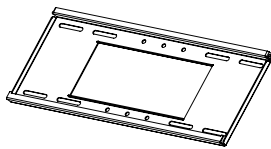
Installation Instructions
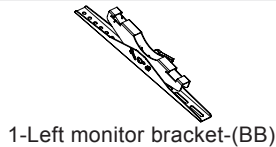## Model Name: BTTL1/52
32″-52″UNIVERSAL TILT WALL MOUNT

Important Notes

- The32"-52"Universal Tilt Wall Mount supports LCD and supports a maximum load of 57 kg (125 lbs),adjustable wide range tilt:+ 5°/-15° .

- The manufacturer does not accept responsibility for incorrect installation.
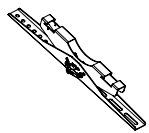
Component Checklist

Wall Plate

1-Left monitor bracket-(BB)

1-Right monitor bracket-(CC)

Security Bracket

TOOLS REQUIRED:
- Power Drill
- 10mm or 6mm Drill Bit
- Phillips Head Screw Driver
- Spirit Level
- 13mm ($1/2$") Socket Wrench or Shifter

Bits Bag

C
⌀ 8.2X1.5X ⌀ 16 iron spacer(x4)

J
25. 65x25. 65x2. 5 square spacer (x4)

K
⌀ 12.7X ⌀ 6.0X12.7 Spacer(x4)

L
⌀ 19X ⌀ 8.2X19.6 Spacer(x4)

M
concrete anchor M8X50(x4)

N
M8X70 outside the hexagonal self-tapping screws(X4)

pan head screw

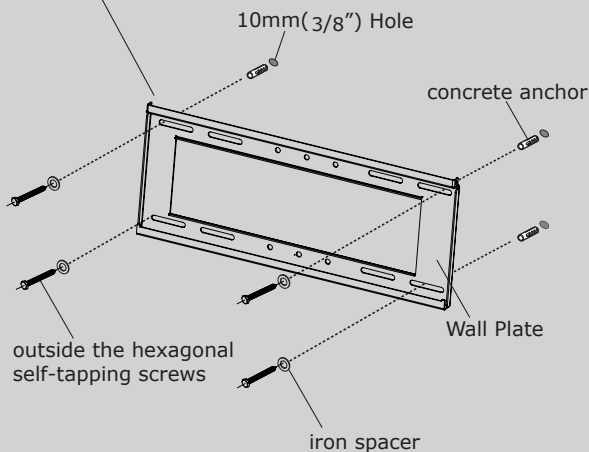|		
M8x35mm	(x4 each)	I
M8x16mm	(x4 each)	H
M6x30mm	(x4 each)	G
M6x16mm	(x4 each)	F
M5x30mm	(x4 each)	E
M5x16mm	(x4 each)	D

Ⓐ Mounting the Wall Plate

Masonry Wall

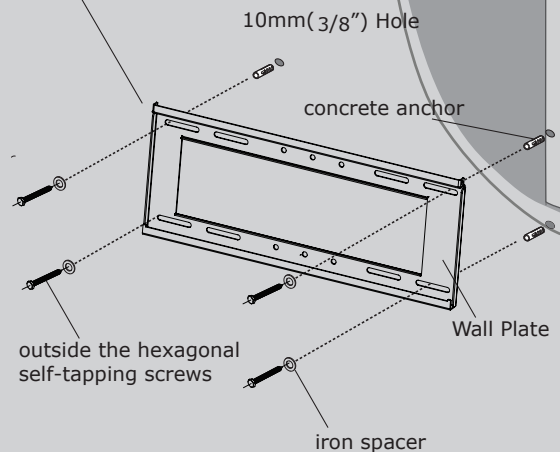**TIP:Use a spirit level to ensure the Wall Plate is horizontal**

Note:Ensure the Wall Plate is mounted with the folded tabs pointing upwards.

10mm(3/8") Hole

concrete anchor

Wall Plate

outside the hexagonal self-tapping screws

iron spacer

OR

Timber Stud Wall

Note:Ensure the Wall Plate is mounted with the folded tabs pointing upwards.

10mm(3/8") Hole

concrete anchor

Wall Plate

outside the hexagonal self-tapping screws

iron spacer

Ⓑ Mounting the Display Brackets
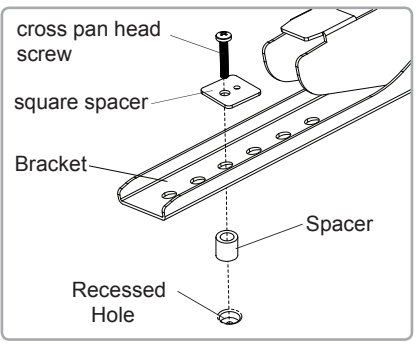
cross pan head screw

square spacer

M6 & M8 Screw Hole

M4 & M5 Screw Hole

*NOTE:
When attaching the mounting screws to the display,make sure the direction of Brackets is correct and ensure that both brackets are vertically aligned.

Recessed Mounting Holes. If the mounting holes are recessed into the back of the display, use the supplied spacers to pack the recessed hole. If the mounting screw is M4＆M5＆M6,use the ¢12.7x¢6.0x12.7mm Spacers.If the mounting screw is M8,use the ¢19x¢8.2x19.6mm Spacers. Ensure that the brackets are securely fixed to the display.

cross pan head screw

square spacer

BB

CC

cross pan head screw

square spacer

Bracket

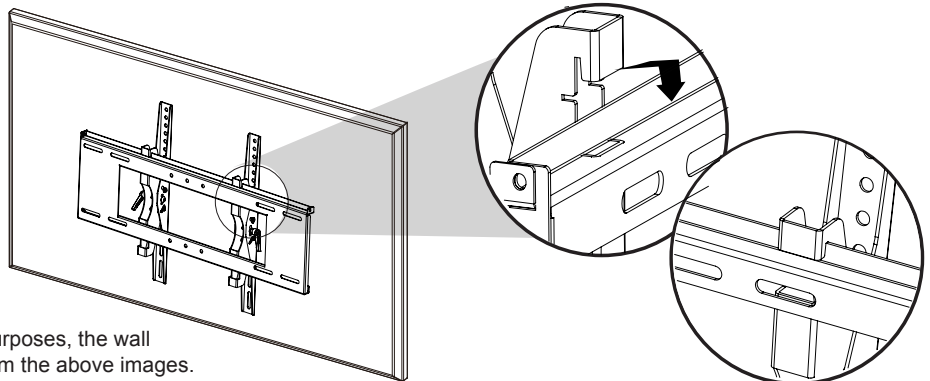Spacer

Top of Display

Back of Display

Recessed Hole

Ⓒ Attaching the display to the wall plate

Note: This procedure will require two persons

With the Brackets attached to the display, lift the display and hook the brackets onto the Wall Plate as shown.
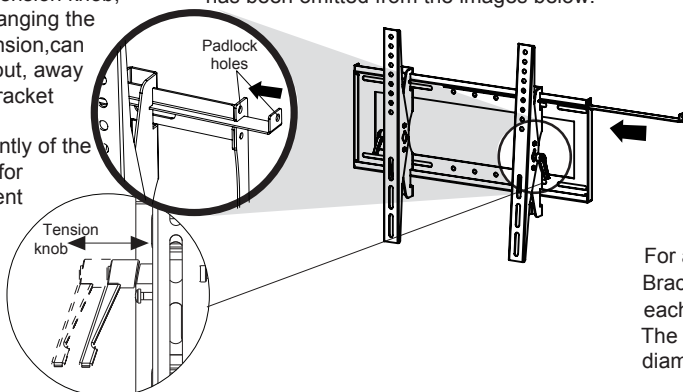
Note: For demonstration purposes, the wall has been omitted from the above images.
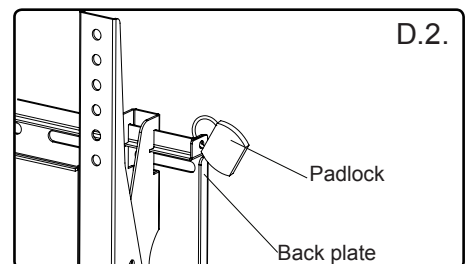
Ⓓ Security Option

D.1.

Note:The tension knob, without changing the bracket tension,can be pulled out, away from the bracket and turned independently of the knob post for readjustment

Note: For demonstration purposes, the display has been omitted from the images below.

Padlock holes

Tension knob

D.2.

Padlock

Back plate

For additional security, it is suggested that the Security Brackets be inserted and a Padlock attached through each Security Bracket and the Wall Plate as shown. The Padlocks (not supplied) should have a shackle diameter no larger than 5mm (3/16").